ЛОС

LCD Монитор Инструкция за употреба E970SWN/E970SWNL/E2270SWN LED фонова светлина



БЕЗОПАСНОСТ	3
Национални конвенции	3
Захранване	4
Инсталиране	6
Почистване	7
НАСТРОЙВАНЕ	9
Съдържание на кутията	9
Поставяне на поставка & стойка	
НАГЛАСЯНЕ НА ЪГЪЛА НА ГЛЕДАНЕ	
Свързване на монитора	12
НАСТРОЙВАНЕ	13
Настройване на оптималната разделителна способност	13
Windows Vista	
Windows XP	
Windows ME/2000	
Windows 8	
Бутони за бърз достъп	
LED индикатор	20
ДРАЙВЕР	21
ДРАЙВЕР НА МОНИТОРА	21
Windows 8	21
Windows 7	25
Windows Vista	
Windows XP	
Windows 2000	
Windows ME	
I-MENU	
E-SAVER	35
SCREEN+	36
ВЪЗМОЖНИ ПРОБЛЕМИ	37
СПЕЦИФИКАЦИИ	39
Основни спецификации	
Зададени режими на дисплея	41
ПРЕДНАЗНАЧЕНИЯ НА ПИНОВЕТЕ	42
PLUG&PLAY	43

ПРАВИЛА	44
FCC бележи	44
WEEE ДЕКЛАРАЦИЯ(ПО ИЗБОР)	45
WEEE ДЕКЛАРАЦИЯ ЗА ИНДИЯ (ПО ИЗБОР)	45
EPA ENERGY STAR(ПО ИЗБОР)	46
ЕРЕАТ ДЕКЛАРАЦИЯ(ПО ИЗБОР)	47
УСЛУГИ	48
Гаранционни условия за Европа	48

Безопасност

Национални конвенции

Следващите раздели описват националните конвенции използвани в този документ.

Бележка, Внимание и Предупреждение

В тази инструкция, части от текста може да бъдат съпроводени с икона и са отпечатани с удебелен или наклонен шрифт. Тези части са бележки, неща за които трябва да се внимава и предупреждения и се използват по следния начин:



БЕЛЕЖКА: Бележката означава важна информация, която ви помага за по-добрата употреба на вашата компютърна система.

Энимание: Нещо за което трябва да се внимава означава или потенциална повреда на хардуер или загуба на информация и ви казва как да избегнете проблема.

ПРЕДУПРЕЖДЕНИЕ: Предупреждението означава потенциално нараняване и ви казва как да избегнете проблема. Някои предупреждения може да се появят в алтернативен формат и може да не са съпроводени с икона. В тези случаи, специфичното представяне на предупреждението е със заповед на регулаторните власти.

Захранване

Монитора трябва да се захранва само от типа източник обозначен на етикета. Ако не сте сигурни какъв е източника на захранването в дома ви, свържете се с местния доставчик или местната електро компания.

Мониторът е оборудван с заземяващ щепсел с три щифта, което е щепсел с трети (заземяващ) пин. Този щепсел пасва само на заземяващ тип контакт като предпазна мярка. Ако във вашия контакт не може да се включи щепсел с три щифта, повикайте електротехник да монтира правилен тип контакт или използвайте адаптер, за да заземите безопасно уреда. Не премахвайте предпазната функция на заземяващия щифт.

МИзключете монитора по време на гръмотевични бури или ако няма да се използва за дълъг период от време. Това ще предпази монитора от повреди ако възникнат къси съединения.

• Не претоварвайте захранващите ленти и удължителните кабели. В резултат на претоварването може да възникне пожар или токов удар.

🗥 Контакта трябва да бъде разположен близо до оборудването и трябва да е лесно достъпен.

Инсталиране

• Не поставяйте монитора на нестабилни колички, поставки, триножници, скоби или маси. Ако мониторът падне, може да нарани някой и да има сериозни повреди върху продукта. Използвайте само количка, поставка, триножник, скоби или маси, препоръчани от производителя или такива, които се продават заедно с продукта. Следвайте инструкциите на производителя, когато инсталирате продукта и използвате аксесоарите за окачване, които са препоръчани от производителя. Ако продукта е на количка, те трябва да се местят внимателно.

М Никога не пъхайте предмети в слота на кутията на монитора. Това може да повреди някоя платка, което да доведе до пожар или токов удар. Не разливайте течности върху монитора.

Ие поставяйте предната част на продукта върху пода.

Ако окачвате монитора на стена или рафт, използвайте комплект за окачване, който е одобрен от производителя и следвайте инструкциите в комплекта.

Оставете малко място около монитора, както е показано по-долу. В противен случай, циркулацията на въздуха може да не е достатъчна, което ще доведе до прегряване, водещо от своя страна до пожар или повреда на монитора.

Погледнете по-долу за препоръчителните зони на вентилация около монитора, когато той е инсталиран на стената или върху поставката:



Инсталиран на стената

Инсталиран върху поставка



Почистване

Почиствайте кутията редовно с кърпа. Можете да използвате слаби почистващи препарати, за да премахнете петната, вместо силни препарати, които ще прегорят кутията на продукта.

Моля изключете захранващия кабел преди да почиствате продукта.







Други

Ако продукта издава странна миризма, звук или дим, изключете захранващия кабел НЕЗАБАВНО и се свържете със сервизния център.

Уверете се, че вентилационните отвори не са блокирани от плоскост или перде.

Не подлагайте LCD мониторът на силни вибрации и състояния на силен натиск по време на работа.

1 За дисплей с гланцов панел потребителят трябва да обмисли поставянето на дисплея на панела може да доведе до смущаващи отражения от околните леки и светли повърхности.

Настройване

Съдържание на кутията



Поставяне на поставка & стойка

Моля поставете или махнете поставката като следвате изображенията по-долу

Поставяне:



Нагласяне на ъгъла на гледане

За оптимално удобство при гледане е препоръчително да гледате към целия екран на монитора, след това да нагласите ъгъла на монитора според вашето предпочитание. Дръжте поставката, за да не бутнете монитора, докато променяте ъгъла на монитора. You are able to adjust the monitor's angle from -3° to 10°.



🛛 бележка:

Не пипайте течнокристалния дисплей докато променяте ъгъла. Това може да причини щети или счупите екрана

Не регулирайте зрителен ъгъл над 10 градуса, за да се избегне увреждане.

Не поставяйте ръката си близо до пропастта между монитора и основата, за да се избегне нараняване при регулиране на ъгъл на гледане.

Свързване на монитора

Места за свързване на кабели отзад на монитора и на компютъра:



- 1. Мощност
- 2. D-SUB

а да предпазите оборудването, винаги изключвайте компютъра и LCD монитора преди да правите свръзки.

- 1 Свържете захранващия канел към АС порта отзад на монитора.
- 2 Свържете единия край на 15-pin D-Sub кабела отзад на монитора и свържете другия край към D-Sub порта на компютъра.
- 3 Включете монитора и компютъра.

Ако на монитора се покаже изображение, инсталирането е завършено. Ако не се покаже изображение, моля погледнете Възможни проблеми.

Настройване

Настройване на оптималната разделителна способност

Windows Vista

3a Windows Vista:

- 1 Натиснете Start.
- 2 Натиснете Control Panel.

	_
Distances Explorer	916
Total Val	
Talorer Cartie	Deserve
🔯 Witelawa Mada Piayar	Atlan
Window: Photo Galwy	
Contractive Mesanger Devention	A CONTRACTOR OF
A Minister Marting Space	Assettant +
Mindoo Lighter	Computer
Adadas Photophoge CS2	-
Number .	Commit To
Command Prompt	Constituted.
	Default Programs
 All Programs 	Help and Support
Bur laun P	and the second second

3 Натиснете Appearance and Personalization.



4 Натиснете Personalization.



5 Натиснете Display Settings.



6 Нагласете плъзгащия се бутон за разделителната способност на оптималната разделителна способност.



Windows XP

3a Windows XP: 1 Натиснете Start. Bark park Internet Explorer My Documents My Recent Documents Cutlook Express 🖄 My Pictures 10.0 HCT 10.0 📂 My Music Notepad 🗐 My Computer Control Panel 💓 Point Printers and Faxes 100 🕞 Windows Media Player Etelp and Support MSN Explorer 🔎 Search Windows Movie Maker C Run... All Programs 📡 🔀 Log Off 🛛 🔯 Tyrn Off Computer 🚑 start 🚽

- 2 Натиснете Settings.
- 3 Натиснете Control Panel.
- 4 Натиснете Appearance and Themes.



5 Натиснете два пъти Display.



- 6 Натиснете Settings.
- 7 Нагласете плъзгащия се бутон за разделителната способност на оптималната разделителна способност.



Windows ME/2000

3a Windows ME/2000:

- 1 Натиснете Start.
- 2 Натиснете Settings.
- 3 Натиснете Control Panel.
- 4 Натиснете два пъти Display.
- 5 Натиснете Settings.
- 6 Нагласете плъзгащия се бутон за разделителната способност на оптималната разделителна способност.

Windows 8

3a Windows 8:

1. Кликнете с десния бутон и кликнете **All apps** в долния десен ъгъл на екрана.



2. Задайте "View by" на "Category".

3. Кликнете върху Appearance and Personalization.



4. Кликнете върху **DISPLAY.**



Бутони за бърз достъп



Мощност / AUTO

Когато захранването е включено, натиснете бутона Power / AUTO за да конфигурирате автоматично.

Когато захранването е изключено, натиснете бутона Power / AUTO, за да включите монитора. Когато захранването е включено, натиснете бутона Power / AUTO непрекъснато около 2 секунди, за да изключите монитора

LED индикатор

Състояние	Цвят на LED	
Режим с цяла мощност	Зелено	0
Неактивен режим	Трептенето зелен	0

Драйвер

Драйвер на монитора

Windows 8

- 1. Стартирайте Windows® 8
- 2. Кликнете с десния бутон и кликнете All apps в долния десен ъгъл на екрана.



User Accounts

Taskbar

Windows Firewall 🛛 👘 Windows Update

11:16 PM 12/25/2012

5. Кликнете върху икона "Дисплей".



8. Кликнете върху раздела "Monitor" и след това кликнете върху бутона "Properties".

Monitor Type Generic PnP Monitor Monitor Settings Screen refresh rate: 60 Henz Henz Hearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hordware. Colors: True Color (32 bit) Colors: True Color (32 bit) Colors: Colors: True Color (32 bit) Colors: Colo	the second se	shoot Color Management SeForce 9100M G
Generic PnP Monitor Monitor Settings Screen refresh rate: 60 Henz I'de modes that this monitor cannot display Detaing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hordware. Colors: True Color (32 bit) I'rue Color (32 bit) OK Cancel Apply Monitor Properties neral Driver Details Generic PnP Monitor Driver Details Oriver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver I'the device fails after updating the driver, roll back to the previously installed driver.	Monitor Type	1
Monitor Settings Screen refesh rate: ØD Henz Hide modes that this monitor cannot display Descripting this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hordware. Colors: True Color (32 bit) Image: Color (32 bit) OK Cancel Apply Monitor Properties neral Driver Details Generic PnP Monitor Driver Dotate: 6/21/2006 Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver To usables the selected device.	Generic PnP Mo	onitor
Properties Monitor Settings Screen refresh rate: 60 Hentz I Hide modes that this monitor cannot display Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may leed to an unusable display end/or damaged hordware. Colors: True Color (32 bit) It Physical Color (32 bit) OK Cancel Apply Monitor Properties neral Driver Details Generic PnP Monitor Driver Details Oriver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If he device fails after updating the driver, roll back to the previously installed driver.	2	
Monitor Settings Screen refresh rate: 60 Hertz Fide modes that this monitor cannot display Centring this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware. Colors: True Color (32 bit) Color (32		Properties
Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Centring this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or amaged hardware. Colors: True Color (32 bit) OK Cancel Apply KTUKHETE BЪDXY DA3JEJAA "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver Disables the selected device.	Monitor Settings	
Screen releases rate. 60 Hertz	Core on refresh rate:	
But Heitz Hide modes that this monitor cannot display Geering this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hordware. Colors: True Color (32 bit) OK Cancel Apply KTIUKHETE BEDXX pa3dena "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Driver Details Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver_ To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.	CO Lasta	0
☐ Hide modes that this monitor cannot display ☐ dering this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hordware. Colors: True Color (32 bit) OK Cancel Apply Colors: True Color (32 bit) OK Cancel Apply Colors: True Color (32 bit) OK Cancel Apply Colors: True Color (32 bit) Colors: True Color (32 bit) Colors: True Color (32 bit) Colors: To View Data: Driver Details Generic PnP Monitor Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.	ou menz	
Clearing this check box allows you to select display modes that this monitor damaged hardware.	Hide modes that this r	monitor cannot display
Colors: True Color (32 bit) OK Cancel Apply КЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties meral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver Disables the selected device.	Clearing this check box a	allows you to select display modes that this monitor This may lead to an unusable display and/or
Colors: True Color (32 bit) OK Cancel Apply KTIUKHETE BЪDXY DA3JEJAA "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Provider: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver Disables the selected device.	damaged hardware.	this may real to an unasable display anapor
Colors: True Color (32 bit) OK Cancel Apply KJIUKHETE BЪDXУ раздела "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver Disable Disables the selected device.		
Ок Cancel Apply КЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Colors:	
OK Cancel Apply KЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Generic PnP Monitor Driver Provider: Microsoft Driver Version: 61.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	True Color (32 bit)	•
OK Cancel Apply KЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties meral Driver Details Image: Colspan="2">Colspan="2" Colspan=1 Colspan=1 Colspan=1 Colspan=1 Driver Petails Colspan=1 Colspan=1 Colspan=1 Colspan=1 Driver Details Colspan=1 Colspan=1		
OK Cancel Apply KЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Generic PnP Monitor Driver Dotate: 6/21/2006 Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.		
OK Cancel Apply KJIUKHETE BЪDXY DA3JEJA "Driver". ric PnP Monitor Properties neral Driver Details Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.		
OK Cancel Apply КЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.		
OK Cancel Apply KЛИКНЕТЕ ВЪРХУ РАЗДЕЛА "Driver". ric PnP Monitor Properties meral Driver Details Oriver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.		
Кликнете върху раздела "Driver". ric PnP Monitor Properties neral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.		OK Cancel Apply
Inite Provider Microsoft Driver Provider Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.		
Incenter Monitor Properties Ineral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver Disable Disables the selected device.	KOMKHOTO D	
neral Driver Details Generic PnP Monitor Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в	ърху раздела " Driver ".
Generic PnP Monitor Driver Provider. Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver. To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper	ърху раздела " Driver ".
Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details	ърху раздела " Driver ". _{ties}
Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	КЛИКНЕТЕ В ric PnP Monitor Proper neral Driver Details	ърху раздела " Driver ".
Driver Provider. Microsoft Driver Date: 6/21/2006 Driver Version: 6.1.7600.16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	КЛИКНЕТЕ В ric PnP Monitor Proper neral Driver Details Generic PnP Mo	ърху раздела " Driver ". ^{tites}
Driver Date: 6/21/2006 Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper nerat Driver Details Generic PnP Mo	ърху раздела " Driver ". ^{tties}
Driver Version: 6.1.7600 16385 Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper nerat Driver Details Generic PnP Mo Driver Provider.	ърху раздела " Driver ". ^{tties}
Digital Signer: Microsoft Windows Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Date:	ърху раздела "Driver". tites
Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Date: Driver Version:	ърху раздела "Driver". tites nitor Microsoft 6/21/2006 6.1.7600.16385
Driver Details To view details about the driver files. Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider: Driver Date: Driver Version: Digital Signer:	ърху раздела "Driver". tites nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows
Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider: Driver Date: Driver Version: Digital Signer;	ърху раздела "Driver". tties nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows
Update Driver To update the driver software for this device. Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider: Driver Date: Driver Version: Digital Signer: Driver Details	ърху раздела "Driver". tties nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files.
Back Driver If the device fails after updating the driver, roll back to the previously installed driver. Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Date: Driver Version: Digital Signer.	ърху раздела "Driver". tties nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files.
Disable Disables	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Date: Driver Date: Driver Version: Digital Signer. Driver Details Update Driver	ърху раздела "Driver". ties nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files. To update the driver software for this device.
Disable Disables the selected device.	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Date: Driver Date: Driver Version: Digital Signer: Driver Details Update Driver	ърху раздела "Driver". ties nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files. To update the driver software for this device.
Disable Disables the selected device.	KTIUKHETE B ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider: Driver Provider: Driver Date: Driver Version: Digital Signer: Driver Details Update Driver Roll Back Driver	ърху раздела "Driver". ties nitor Microsoft 6/21/2006 6 1.7600.16385 Microsoft Windows To view details about the driver files. To update the driver software for this device. If the device fails after updating the driver, roll back to the previously installed driver.
	KTIUKHETE B ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Provider. Driver Version: Digital Signer. Driver Details Update Driver Roll Back Driver	ърху раздела "Driver". tites nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files. To update the driver software for this device. If the device fails after updating the driver, roll back to the previously installed driver.
To uninstall the driver (Advanced)	KTIUKHETE B ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider: Driver Provider: Driver Date: Driver Version: Digital Signer: Update Driver Roll Back Driver Disable	ърху раздела "Driver". tites nitor Microsoft 6/21/2006 6 1.7600.16385 Microsoft Windows To view details about the driver files. To update the driver software for this device. If the device fails after updating the driver, roll back to the previously installed driver. Disables the selected device.
Uninstall	Кликнете в ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider. Driver Date: Driver Date: Driver Version: Digital Signer. Driver Details Update Driver Roll Back Driver	ърху раздела "Driver". tites nitor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files. To update the driver software for this device. If the device fails after updating the driver, roll back to the previously installed driver. Disables the selected device. To unjectall the driver (Arbumcort)
	KTIUKHETE B ric PnP Monitor Proper neral Driver Details Generic PnP Mo Driver Provider: Driver Provider: Driver Date: Driver Version: Digital Signer: Driver Details Update Driver Roll Back Driver Disable Uninstall	ърху раздела "Driver". tites nitor Microsoft 6/21/2006 6 1.7600 16385 Microsoft Windows To view details about the driver files. To update the driver software for this device. If the device fails after updating the driver, roll back to the previously installed driver. Disables the selected device. To uninstall the driver (Advanced).

10. Отворете прозореца "Update Driver Software-Generic PnP Monitor" като кликнете върху "Update Driver..." и след това кликнете върху бутон "Browse my computer for driver software."

•	Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.
•	Browse my computer for driver software Locate and install driver software manually.

11. Изберете "Let me pick from a list of device drivers on my computer."



12. Кликнете върху бутона "Have Disk". Кликнете върху бутона "Browse" и отидете в следната директория:

X:\Driver\module name (където X е съответната буква за CD-ROM устройството).



- 13. Изберете файла "xxx.inf" и кликнете върху бутона "Open". Кликнете върху бутона "OK".
- 14. Изберете вашия модел монитор и кликнете върху бутона "**Next**". Файловете ще бъдат копирани от CD на твърдия диск.
- 15. Затворете всички отворени прозорци и извадете СD.
- 16. Рестартирайте системата. Системата автоматично ще избере максималната честота на опресняване и съответстващите профили за цветово съвпадение.

Windows 7

- 1. Пуснете Windows 7
- 2. Натиснете върху бутона Start и след това натиснете Control Panel.



3. Натиснете върху иконата Display.

🚱 🕞 - 🛤 • Control Panel • All Co				
and the second s	ontrol Panel Items +		•	Search Control Panel
Adjust your computer's setting	gs			View by: Small icons •
Y Action Center	Administrative Tools	autoPlay	Backup and Restore	
Color Management	Credential Manager	Tate and Time	e Default Programs	· · · · · ·
Desktop Gadgets	Device Manager	wig Devices and Printers	Display	
C Ease of Access Center	E' Folder Options	Fonts	Getting Started	
HomeGroup	Jak Indexing Options	1 Internet Options	 Keyboard 	
Location and Other Sensors	Mouse Multiple Develop	 Network and Sharing Center Recented Controls 	Notification Area scons	
Reformance Information and Tools	Reconstration	A Chose and Medam	Power Continer	
Periormance promation and roots Programs and Seatures	Realtak HD Audia Manager	Recovery	Region and Language	
RemoteAnn and Desition Connection	ans Sound	a Sneeth Recognition	Server Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
A User Accounts	K Windows Anytime Upgrade	Windows CardSpace	Windows Defender	
Windows Firewall	Windows Update			
4 11	~			
а натисне	TE BENYV NV	тона Сћарде	display setting	19
4. натисне	те върху бу	тона Change	display setting	IS.
4. натисне	те върху бу	тона Change	display setting	S.
 Натисне Э Сопtrol Parel → All C 	Control Panel Items + Display	тона Change	display setting	Search Central Pariel 2
4. HATUCHE	Control Panel Items + Display	тона Change	display setting	Search Control Panel
4. HATUCHE	Control Panel Items + Display	тона Change	display setting	S. 49 Search Control Parel &
4. HATUCHE	Control Panel Items	тона Change our screen ms on you screen by choosing one of these of the Magnife tool.	display setting	S. Search Control Parel 2
4. HATUCHE	CONTROL REALEY OF CONTROL REALEY OF CONTROL Panel Items > Deplay Make it easier to read what's on y You can change the lize of text and other ite temporarily enlarge just part of the screen, u	тона Change our screen ms on your screen by choosing one of these of the Magnifer tool.	display setting	Search Control Pinet P
4. HATUCHE	Control Panel Rens + Display Make it easier to read what's on y trous can change the like of that and other its temporarily enlarge just part of the screen, u © Insuler-1005.	тона Change our screen man on your screen by choosing one of these of the Magnifer tool.	display setting	S. Search Control Famil P.
4. HATUCHE	Control Panel Berne	тона Change our screen ms on you screen by choosing one of these c en the <u>Magnifer</u> tool.	display setting	S. Search Control Parel: P
4. HATUCHE	Control Reveil Heres -> Deplay Marker it easier for read what's on y You can chunge the size of read what's on y You can chunge the size of read what's on y Control Reveil Heres, while the size of the screen, while Stratter 125%, (stratut)	тона Change our screen me or you screen by choosing ove of these c ise the Magnifer tool.	display setting	JS. I Second Acad P
4. HATUCHE	Control Reset Demo + Display Market it easier to read what's on y You can charge the size of reat and other its temporarily entance that of the screen, and Control Figure 1995. Wedum + 125% (default)	тона Change our screen m on you creen by choosing one of these or the buyering tool. Prestor	display setting	S. + Seach Cantal Parel P
 HATUCHE Control Ravel + Aut Control Ravel + Aut Control Ravel + Konte Control Ravel + Konte Context + Konte Co	Control Panel Item: + Display Make it easier to read what's on y You can change the size of reat and other ite temporally endangs just part of the screes, a Simular - 1995. Medium - 125% (default) Clarger - 150%	тона Change our screen me on you screen by choosing one of these c en the <u>Manufac</u> tool. //motor	display setting	JS. State Control Famil P V
4. HATUCHE Image: Control Revel > All Control Revel > All Control Revel > All Adjust resolution Adjust resolution Change adjust petiting Adjust ClearType test Set custom text size (DP)	Control Panel Peres + Depiay Marke it easier to read what's on y You can change the use of treat and other in temporarily entarge juit part of the scores, u Structure - 1995. @ Medium - 1255; (default) @ Larger - 150%	тона Change our screen me o you screen by choosing one of these o to the <u>Magnifice</u> tool. Preview	display setting	JS. Second Control Fame(2)
4. HATUCHE	Control Reset Deems + Depicy Control Reset Deems + Depicy Market it easier to read what's on y to can change be size of read and other the emogeneity energy of port of the screens of sources - 100% Charger - 150%	тона Change our screen mi on you screen by choosing one of these c no the <u>Magnific</u> tool. Prostery	display setting	JS. Second Control Field P
4. HATUCHE	Control Revell Herms + Desplay Make it easier to read what's on y You can change the size of tert and other is teresponsily enlarge just part of the screet, or Simular - 1995. Westurn - 1955; Idefaulto Larger - 150%	тона Change our screen me on you screen by choosing one of these c as the Magnifer, tool.	display setting	JS. Sector Current Part P
4. HATUCHE	Control Reset Demo + Deplay Market it easier to read what's on y You can charge the size of reat and other in temporarily entarge just part of the scree, u Smaller 125% @ Medium - 125% (default) @ Larger - 150%	тона Change our screen mr on your screen by choosing one of these of the the <u>Unperform</u> tool. Prestor	display setting	JS. Seent Comm Rev. P
4. HATUCHE	Control Reset Demo + Deputy Control Reset Demo + Deputy Too can change the size of test and other the temporarity entrange just part of the scores, or show - 300% Wedsum - 125% (default) @ Larger - 150%	тона Change our screen me on you iscen by choosing one of these c es the <u>Homiter</u> tool. Prestow	display setting	JS. Second Control Field P
4. HATUCHE	Control Panel Panel - P Dapiay Marken it easier to read what's on y You can change the size of freet and other in temporarily entarge just and of the screen, or Structure : 1995. @ Mechum : 125% (default) @ Larger - 150%	тона Change our screen me on you screen the Magnifer tool. Укносу Граносу	display setting	JS. I Second Acad (P) I Second Acad (P)
4. HATUCHE Image: Control Read + All C Control Read + Kone Adjust resolution Image: Control Read + All C Control Read + Kone Adjust resolution Charger disputs utilings Adjust Clearlype tent Set control text size (DP)	Control Reset Dems + Deplay Market it easier to read what's on y to can change be take of test and other the encountry energy in part of the screen su for same - 100% a Medium - 125% (default) c Larger - 150%	тона Change our screen mit on you screen by choosing one of beer of the the <u>Manifer</u> tool. Protev	display setting	JS. I Seech Cannol Revi R
4. HATUCHE	Control Revel Rever.	тона Change our screen me on you screen by choosing one of these c ere the <u>Manufac</u> tool.	display setting	JS. Second Counter Family P V
4. HATUCHE Image: Control Read + All Control Read + Konce Adjust resolution Image: Control Read + All Control Read + Konce Adjust resolution Image: Control Read + All Control Read + Konce Adjust resolution Image: Control Read + All Control Read + Konce Image: Control Read + All Control Read + Konce Control Read + Konce Image: Control Read + All Control Read + Konce	Control Revel Deam + Deplay Market it easier to read what's on y You can charge the size of test and other in temporarily enarge just part of the screen, a g snule: 1991. @ Medium - 125% (default) @ Larger - 150%	тона Change our screen mr on you roven by choosing one of these o to the <u>Unoperator</u> Prestor	display setting	JS. Seech Control Print Print
4. HATUCHE	Control Reset Deems + Depiay Control Reset Deems + Depiay Makee it easier to read what's on y to can change be size of test and other temporarily energy and part of the scores, or make - 1995. Weedsum - 125% (default) @ Larger - 150%	тона Change our screen me on you iccent by choosing one of these c es the <i>Linguist</i> tool.	display setting	JS. Statest Control Famil 8 V
4. HATUCHE	Control Reset (Perms + Display) Market it easier to read what's on y You can charge the size of reat and other its temporarily entarge just part of the screen, and Smaller 125% (default) @ Larger - 150%	тона Change Our screen mr on your screen by choosing one of these of the burgeting tool. Prestor	display setting	JS. Seent Comm Rev.
4. HATUCHE	Control Reset Dems + Deplay Control Reset Dems + Deplay Make it easier to read what's on y to can change the size of test and other emportantly endary in part of the screens a granuler.com granuler.co	тона Change our screen min on you screen by choosing one of beer of the the <u>Manifer</u> tool. Protev	display setting	JS. I Seech Control First P
4. HATUCHE	Control Panel Peres + Depiay Marke it easier to read what's on y You can change the use of treat and other in temporary entarge juit part of the scores, u Struke - 1990. Wedum - 125% (default) Uarger - 150%	тона Change our screen me on you screen by choosing one of these c en the Manufact tool. //meter	display setting	JS. Second Control Ford V
4. HATUCHE Image: Control Rend + And Control Rend + And Control Rend + Rend Adjust resolution Adjust resolution Charge adjust state Adjust resolution Charge adjust state Adjust resolution Set also Personalization	Control Revel Demo + Deplay Market it easier to read what's on y You can charge the size of test and of the active in temporarily entage just part of the screen, a g smaller 105% @ Medium - 125% (default) @ Larger - 150%	тона Change our screen mr on you roten by choosing one of here o to be <u>linguing</u> but. Protex	display setting	JS. Seech Control Freed P
4. HATUCHE	TEB BDDXy OY Control Reset Deems > Deplay Make it easier to read what's on y for can change be list of read what's on y for can change be list of read what's on y for can change be list of the sores of make 1975. @ Medium - 125% (default) @ Larger - 150%	тона Change our screen me on you iccently choosing one of these c es the <u>Hogenite</u> tool.	display setting	JS. Sector Control Form (P) (Sector Control Form)

5. Натиснете бутона Advanced Settings.

🔁 🕢 = 🎴 + Control Panel + All Con	rol Panel Items + Display + Screen Resolution	 +y Search Control Panel
	Change the appearance of your display	
	Display: 1. Nikidia Default Flat Panel • Resolution: 1920 = 1680 (recommended) • Orientation: Landicape •	
	Advanced setting Make test and other items larger or smaller What display settings should I choose?	8
	OK Carcel Appy	

6. Натиснете бутона Monitor и след това натиснете бутона Properties.



7. Натиснете бутона Driver.

General Dr	iver Details	
N	Generic PnP Mo	nitor
1	Driver Provider.	Microsoft
	Driver Date:	6/21/2006
1	Driver Version:	6.1.7600.16385
1	Digital Signer:	Microsoft Windows
Driver	Details	To view details about the driver files.
Update	Driver	To update the driver software for this device.
Roll Ba	ck Driver	If the device fails after updating the driver, roll back to the previously installed driver.
Dis	able	Disables the selected device.
Uni	nstall	To uninstall the driver (Advanced).

8. Отворете прозореца Update Driver Software-Generic PnP Monitor като натиснете Update Driver... и след това натиснете бутона Browse my computer for driver software.



9. Изберете Let me pick from a list of device drivers on my computer.

Browse for c	friver software on y	our computer		
Search for drive	r software in this locatio	n:		
D:\Drivers\Tou	ch device		Brow	se
Include subfo	olders			
Let me p This list with the p	pick from a list of c	levice drivers or oftware compatible	n my compu	uter
driver soft	ware in the same catego	ory as the device.	with the device	, and an

10. Натиснете бутона Have Disk. Натиснете бутона Browse и преминете в следната директория: X:\Driver\module name (където X е буквата на дисковото устройство за CD-ROM устройството).



- 11. Изберете файлът "xxx.inf" и натиснете бутона "Open". Натиснете бутона "OK".
- 12. Изберете модела на вашия монитор и натиснете бутона "Next". Файловете ще бъдат копирани от диска на вашия твърд диск.
- 13. Затворете всички отворени прозорци и извадете диска.
- 14. Рестартирайте системата. Системата автоматично ще избере максималната скорост на обновяване и съответните Съответстващи Профили на Цветовете.

Windows Vista

1 Натиснете Start и Control Panel. След това натиснете два пъти върху Appearance and Personalization.



2 Натиснете Personalization и след това върху Display settings.



3 Натиснете Advanced Settings...

lonitor		
Drag the icons to match your moni		Jdentify Monitors
1. (Multiple Meniters) en NVIDIA (2) [No s ny main en nvitse	eForce 6600 LE (N	Acrosoft Corporation - •
1. (Multiple Menitors) on NVIDIA () [] [Inis a my main menitor]] [atend the desitop ents this me [Insolution	eforce 5600 LE (P	Acrosoft Corporation • •
Outlight Menitors) on NVIDLA (Dis a my main menitor Dia a my main menitor	eforce 6600 LE (P nitor High	Acrosoft Corporation - • Colors Highest (32 bit) •

4 Натиснете Properties в бутона Monitor. Ако бутона Properties не е активен, това означава, че настройването на вашия монитор е завършено. Монитора може да се използва така. Ако се появи съобщението Windows needs..., както е показано на снимката по-долу, натиснете Continue.



5 Натиснете Update Driver... в бутона Driver.

Generic PnP Monitor Properties	Generic PnP Monitor Properties
General Driver, Details	General Driver Details
Genetic PriP Montor	Generic PriP Monitor
Device type: Monitors Manufacture: (Standard monitor types)	Driver Provider: Microsoft Driver Date: 6/21/2006
Location: on NV/DIA GeForce 6600 LE (Microsoft Corpo Device status	Diver Venion 6.0.6000 15355 Digital Signer microsoft windows
This device is working property.	Driver Details To vew details about the driver files.
	Update Driver
	Boll Back Driver back to the previously installed driver
	Deables the selected device.
	Uninstal To uninstal the driver (Advanced).
OK Cencel	OK Cancel

6 Отметнете кутията пред Browse my computer for driver software и натиснете Let me pick from a list of device drivers on my computer.

	Updete Driver Software - Genetic Pull Monton			-
Br	rowse for driver software on your comput	ber.		
1er	arch for driver software in this location:			
	1000	•	Browns	
12	(include subfolders			
	 Let me pick from a list of device driver This list will show installed driver software competent software in the same category as the device. 	s on my con Ble with the de	nputer vice, and all driver	
			Next	Cancel

- 7 Натиснете бутона Have Disk..., след натиснете бутона Browse... и изберете подходящото дисково устройство F:\Driver (CD-ROM устройството).
- 8 Изберете модела на вашия монитор и натиснете бутона "Next".
- 9 Натиснете Close Close OK OK на следващите екрани, които се показват последователно.

Windows XP

- 1 Пуснете Windows XP.
- 2 Натиснете бутона Start и след това бутона Control Panel.



5 Изберете бутона Settings и след това натиснете бутона Advanced.



Изберете бутона Monitor.

Ако бутона Properties не е активен, това означава, че настройването на вашия монитор е завършено. Моля спрете инсталирането.

Ако бутона Properties е активен, натиснете върху бутона Properties.

Моля следвайте стъпките по-долу.



Натиснете бутона Driver и след това натиснете бутона Update Driver.... 7



8 Изберете 'Install from a list or specific location [advanced]' радио бутона и след това натиснете бутона 'Next'.



9 Изберете 'Don't Search. I will choose the driver to install' радио бутона. След това натиснете бутона 'Next'.



10 Натиснете бутона Have Disk..., след натиснете бутона Browse... и изберете подходящото дисково устройство F: (CD-ROM устройството).



- 11 Натиснете бутона Ореп и след това натиснете бутона ОК.
- 12 Изберете модела на вашия монитор и натиснете бутона "Next".
 - Ако можете да видите съобщението has not passed Windows Logo testing to verify its compatability with Windows XP, моля натиснете върху бутона Continue Anyway.
- 13 Натиснете бутона Finish и след това бутона Close.
- 14 Натиснете бутона Ок и след това бутона ОК отново, за да затворите прозорец Display Properties.

Windows 2000

- 1. Пуснете Windows® 2000
- 2. Натиснете бутона 'Start', преминете на 'Settings' и след това натиснете 'Control Panel'.
- 3. Натиснете два пъти върху иконата 'Display'.
- 4. Изберете бутона 'Settings', след това натиснете 'Advanced...'.
- 5. Изберете 'Monitor'
- Ако бутона Properties не е активен, това означава, че настройването на вашия монитор е завършено. Моля спрете инсталирането.
- Ако бутона Properties е активен, натиснете върху бутона Properties. Моля следвайте стъпките по-долу.
- 6. Натиснете 'Driver' и след това натиснете върху 'Update Driver...', след това натиснете върху бутона 'Next' button.
- 7. Изберете 'Display a list of the known drivers for this device so that I can choose a specific driver', след това натиснете 'Next' и натиснете върху 'Have disk...'.
- 8. Натиснете върху бутона 'Browse...', след това изберете подходящото устройство F: (CD-ROM устройство).
- 9. Натиснете бутона 'Open' и след това натиснете бутона 'OK'.
- 10. Изберете модела на вашия монитор и натиснете бутона 'Next'.
- 11. Натиснете бутона 'Finish' и след това бутона 'Close'.

Ако видите прозореца 'Digital Signature Not Found', натиснете върху бутона 'Yes'.

Windows ME

- 1. Пуснете Windows® Me
- 2. Натиснете бутона 'Start', преминете на 'Settings' и след това натиснете 'Control Panel'.
- 3. Натиснете два пъти върху иконата 'Display'.
- 4. Изберете бутона 'Settings', след това натиснете 'Advanced...'.
- 5. Изберете бутона 'Monitor', след това натиснете бутона 'Change...'.
- 6. Изберете 'Specify the location of the driver(Advanced)' и натиснете бутона 'Next'.
- 7. Изберете 'Display a list of all the drivers in a specific location, so you can choose the driver you want', след това натиснете върху 'Next' и натиснете 'Have Disk...'.
- 8. Натиснете върху бутона 'Browse...', изберете подходящото устройство F: (CD-ROM Drive), след това натиснете бутона 'OK'.
- 9. Натиснете бутона 'ОК', изберете модела на вашия монитор и натиснете бутона 'Next'.
- 10. Натиснете бутона 'Finish' и след това бутона 'Close'.

i-Menu



Добре дошли в i-Menu софтуера от AOC. i-Menu улеснява нагласянето на настройките на монитора, като се използват менюто на екрана вместо бутона OSD на монитора. За да завършите инсталирането, просто следвайте помощника за инсталирането.



e-Saver



Добри дошли за използването на софтуера за управление на мощността на монитора AOC е-Saver! AOC e-Saver има функции Smart Shutdown за вашия монитор, която позволява на монитора да се изключи в определено време, когато компютър е в някакво състояние (включен, изключен, sleep или скрийн сейвър); реалното време за изключване зависи от вашите предпочитания (погледнете пример по-долу).

Моля натиснете на driver/e-Saver/setup.exe, за да започне инсталирането на e-Saver софтуера, и следвайки помощника завършете инсталирането на софтуера.

При всяко от четирите състояния на компютъра, можете да избере от падащото меню желаното време (в минути) за автоматично изключване на вашия монитор. Примерът по-долу илюстрира:

- 1 Монитора никога няма да се изключи, докато компютъра е включен.
- 2 Монитора ще се изключи автоматично 5 минути по-късно след като е изключен компютъра.
- 3 Монитора ще се изключи автоматично 10 минути по-късно след като компютъра е в режим sleep/стендбай.
- 4 Монитора ще се изключи автоматично 20 минути по-късно след като се появи скрийн сейвъра.



Можете да натиснете RESET, за да върнете настройките по подразбиране на e-Saver, както е по-долу.



Screen+



Добре дошли в софтуера Screen+ на AOC. Scree+ софтуера е разделящ инструмент за екрана на работния плот, като той разделя работния плот н различни панели, като всеки панел представлява различен прозорец. Трябва само да издърпате прозореца в съответния панел, когато искате да имате достъп до него. Той поддържа показване на няколко монитора, за да улесни задачите ви. Моля следвайте софтуера за инсталация, за да го инсталирате.



Възможни проблеми

Проблем и Въпрос	Възможно разрешение				
	Уверете се, че бутона за захранване е включен и				
сер индикатора за захранването	захранващия кабел е правилно свързан към контакта и				
не е включен	към монитора.				
	- Свързан ли е правилно захранващия кабел?				
	Проверете как е свързан захранващия кабел и дали има				
	ток.				
	- Свързан ли е правилно кабела?				
	(Свързан чрез D-sub кабела)				
	Проверете свръзката на DB-15 кабела				
	(Свързан чрез DVI кабела)				
	Проверете свръзката на DVI кабела				
	DVI входа не е достъпен за всички модели.				
	- Ако захранването е включено, рестартирайте				
	компютъра, за да видите първоначалния екран (екрана на				
	свързване), който може да бъде видян.				
	Ако първоначалния екран (екрана на свързване) се появи,				
	заредете компютъра, заредете режима в приложен				
Няма изображение на екрана	режим (safe режим за Windows ME/XP/2000) и след това				
	променете честотата на видео картата (погледнете				
	Настройване на оптимална разделителна способност).				
	Ако първоначалния екран (екрана на свързване) не се				
	появи, се свържете със сервизния център или доставчика				
	ви.				
	- Виждате ли Input Not Supported на екрана?				
	Можете да видите това съобщение когато сигнала от				
	видео картата надвишава максималната разделителна				
	способност и честота, с които монитора може да работи				
	нормално. Настройте максималната разделителна				
	способност и честотата, така че монитора да работи				
	нормално.				
	 Уверете се, че драйверите за АОС монитора са 				
	инсталирани.				
	Нагласете контраста и яркостта.				
	Натиснете, за да се нагласят автоматично.				
Картината е смутена & има сенки	Уверете се, че не използвате удължителен кабел или				
	суич. Препоръчваме да включите монитора директно към				
	изхода на видео картата отзад.				
	Преместете електрическите устройства, които може да				
	предизвикват смущения, възможно по-далеч от				
Картината прескача, мига или има	монитора.				
вълни в картината	Използвайте максимален момент на обновяване, който				
	може да понесе монитора при разделителната				
	способност, която използвате.				

Монитора блокира в изключен режим	Захранващия бутон на компютъра трябва да е в положение ON.
	Видео картата на компютъра трябва да се плътно
	наместена в слота си.
	Уверете се, че видео кабела на монитора е правилно
	свързан към компютъра.
	Прегледайте внимателно видео кабела на монитора и се уверете,че няма прегънат пин.
	Уверете се, че компютъра работи като натиснете бутона
	CAPS LOCK докато наблюдавате LED светлината CAPS
	LOCK. LED светлината трябва да се включва или
	изключва след като натискате бутона CAPS LOCK.
Липсва един от основните цветове	Прегледайте внимателно видео кабела на монитора и се
(червен, зелен или син)	уверете,че няма прегънат пин.
	Уверете се, че видео кабела на монитора е правилно
	свързан към компютъра.
Изображението на екрана не е	Нагласете хоризонталната и вертикалната позиции или
центрирано или не е оразмерено	натиснете бутона за бърз достъп (AUTO).
правилно	
Картината има дефекти в	Нагласете RGB цветовете или изберете желаната
цветовете (бялото не изглежда	подсиленост на цветовете.
бяло)	
Хоризонтални или вертикални	Използвайте режима за изключване на Windows
смущения на екрана	95/98/2000/ME/XP и нагласете часовника и фокуса.
	Натиснете, за да се нагласи автоматично.

Спецификации

Основни спецификации

Танел Име на модела		E970Swn/E970Swnl					
	Система	ТFT цветен LCD					
Размер на картината, който		47.00 см по диагонал					
	се вижда						
	Пикселно покритие	0.3mm(X) x 0.3мм(B)					
	Видео	R, G, B, аналогов интерфейс и					
	Разделна синхронизация	X/BTTL					
	Цветовете на дисплея	16.7М цвята					
	Точков часовник	85.5MHz					
Разделителна	Хоризонтален обхват на						
способност	сканиране	30 KHZ - 60 KHZ					
	Хоризонтален размер на	400 8 mm					
	сканиране (максимален)	409.8 1111					
	Вертикален обхват на						
	сканиране	30 HZ - 70 HZ					
	Вертикален размер на	230.4мм					
	сканиране (максимален)						
	Оптимална зададена	1366x 768 (60 Hz)					
	разделителна способност						
	Plug & Play	VESA DDC2B/CI					
	Входящ конектор	VGA					
	Входящ видео сигнал	Аналогов: 0.7Vp-р (стандартен), 75 ОНМ					
	Източник на захранване	100-240V~, 50/60Hz					
	Консумация на енергия	Активен режим: 15 W (стандартно)					
		Стендбай: < 0.5 W					
Физически	Тип на конектора	VGA					
характеристики	Тип на сигналния кабел	Може да се разкача					
	Температура	Работен режим	0° до 40°				
		Неработен режим	-25° до 55°				
	Влажност	Работен режим	10% до 85% (не				
			образува конденз)				
		Неработен режим	5% до 93% (не				
			образува конденз)				
	Надморска височина	Работен режим	0~ 3658 м (0~ 12000				
			фута)				
		Неработен режим	0~ 12192 м (0~ 40000				
			фута)				

Панел	Име на модела	E2270Swn				
	Система	ТFT цветен LCD				
Размер на картината, ко		54.7 см по диагонал				
	се вижда					
	Пикселно покритие	0. 2482(х) х0. 2482мм(в)				
	Видео	R, G, B, аналогов интерфейс и				
	Разделна синхронизация	X/B TTL				
	Цветовете на дисплея	16.7М цвята				
	Точков часовник	148.5MHz				
Разделителна	телна Хоризонтален обхват на со кистора кист					
способност	пособност сканиране 30 kHz - 83 kHz					
	Хоризонтален размер на	176 61mm				
	сканиране (максимален)	470.0411111				
	Вертикален обхват на	50 Hz - 76 Hz				
	сканиране	50112 - 70112				
	Вертикален размер на	268.11mm				
	сканиране (максимален)					
	Оптимална зададена	1920x 1080 (60 Hz)				
	разделителна способност					
	Plug & Play	VESA DDC2B/CI				
	Входящ конектор	VGA				
	Входящ видео сигнал	Аналогов: 0.7Vp-р (стандартен), 75 ОНМ				
	Източник на захранване	100-240V~, 50/60Hz				
	Консумация на енергия	Активен режим: 18W (стандартно)				
		Стендбай: < 0.5 W				
Физически	Тип на конектора	VGA				
характеристики	Тип на сигналния кабел	Може да се разкача				
	Температура	Работен режим	0° до 40°			
		Неработен режим	-25° до 55°			
	Влажност	Работен режим	10% до 85% (не			
			образува конденз)			
		Неработен режим	5% до 93% (не			
			образува конденз)			
	Надморска височина	Работен режим	0~ 3658 м (0~ 12000			
			фута)			
		Неработен режим	0~ 12192 м (0~ 40000			
			фута)			

Зададени режими на дисплея

Стандар	Разделител на способност	Хоризонтал на честота (kHz)	Вертикалн а честота (Hz)	Inch							
Т				18.5 "	19 "	19.5 "	20 "	21.5	22 "	23 "	23.6
	640 X 480@60Hz	31.469	59.940	V	V	V	V	V	V	V	V
VGA	640 X 480@67Hz	35.000	66.667	V	V	V	\vee	V	V	V	V
	640 X 480@72Hz	37.861	72.809	V	V	V	V	V	V	V	V
	640 X 480@75Hz	37.500	75.000	V	V	V	V	V	V	V	V
DOS MODE	720 X 400@70Hz	31.469	70.087	V	V	V	\vee	V	V	V	V
	800 X 600@56Hz	35.156	56.250	V	V	V	\vee	V	V	V	V
SVGA	800 X 600@60Hz	37.879	60.317	V	V	V	V	V	V	V	V
576/1	800 X 600@72Hz	48.077	72.188	V	V	V	V	V	V	V	V
	800 X 600@75Hz	46.875	75.000	V	V	V	V	V	V	V	V
MAC MODE	832 X 624@75Hz	49.725	74.551	V	V	V	V	V	V	V	V
	1024 X 768@60Hz	48.363	60.004	V	V	V	V	V	V	V	V
XGA	1024 X 768@70Hz	56.476	70.069	V	V	V	\vee	V	V	V	V
	1024 X 768@75Hz	60.023	75.029	V	V	V	V	V	V	V	V
VESA- MODE	1280 X 960@60Hz	60.000	60.000						V	V	
SXGA	1280 X 1024@60Hz	63.981	60.020		V	V		V	V	V	V
	1280 X 1024@75Hz	79.976	75.025		V	V		V	V	V	V
WXGA	1360 X 768@60Hz	47.712	60.015	V							
	1366 X 768@60Hz	47.712	59.790	V							
WXGA+	1440 X 900@60Hz	55.935	59.876		V			V	V	V	V
WSXGA	1600 X 900@60Hz	60.000	59.950			V	V				
WSXGA+	1680 X 1050@60Hz	65.290	59.950					V	V	V	V
FHD	1920 X 1080@60Hz	67.500	60.000					V		V	V

Предназначения на пиновете



Пин	Страна с 15 пина на единичен кабел		
1	Видео червено		
2	Видео зелено		
3	Видео синьо		
4	N.C.		
5	Засичане на кабела		
6	GND-R		
7	GND-G		
8	GND-B		
9	+5V		
10	Заземяване		
11	N.C.		
12	DDC-серийна информация		
13	Хоризонтално синхронизиране		
14	Вертикално синхронизиране		
15	DDC-сериен часовник		

Plug&Play

Функция Plug&Play DDC2B

Този монитор е снабден с VESA DDC2B способности според стандарта VESA DDC. Това позволява на монитора да информира системата за своята идентичност и в зависимост от използваното ниво на DDC, да предава допълнителна информация относно способностите на неговия дисплей.

DDC2B е двупосочен канал за информация, базиран на I2C протокола. Компютъра може да изисква EDID информация през DDC2B канала.

Правила

FCC бележи

ПРЕДУПРЕЖДЕНИЕ за съобщението относно FCC клас В смущението на радио честотите: (за FCC сертифицирани модели)

Бележка: Това оборудване е тествано и отговаря на ограниченията за клас В цифрово устройство, заложени в част 15 от правилата на FCC. Тези ограничения са заложени, за да осигурят защита срещу вредни смущения при инсталиране в жилищни сгради. Това оборудване произвежда, използва и може да излъчва радио честотна енергия и ако не се инсталира или използва според инструкциите, може да предизвика вредни смущения на радио комуникациите. Въпреки това, това не е гаранция,че тези смущения няма да възникнат при дадената инсталация. Ако това оборудване предизвика вредни смущения на радио или телевизионното приемане, което може да се определи като оборудването се изключи и включи, потребителя трябва да се опита да поправи смущенията чрез една или повече от следните мерки:

Разположи наново или премести приемащата антена.

Увеличи разстоянието между оборудването и приемника.

Свърже оборудването към контакт с различна мрежа, от този, към който е включен приемника. Да се свърже с доставчика или опитен радио/телевизионен техник за помощ.

БЕЛЕЖКА:

Промените и модификациите, които не са одобрени от лицата отговорни за съвместимостта, може да отмени правото на потребителя да работи с оборудването.

Защитни интерфейс кабели и захранващи кабели, ако има такива, трябва да се използват, за да може уреда да отговори на ограниченията за излъчвания. Производителя не носи отговорност за всякакви радио или телевизионни смущения, предизвикани от неразрешени модификации на оборудването. Отговорност на потребителя е да оправи тези смущения.

WEEE декларация(по избор)

Изхвърляне на оборудване от потребителя в частни домакинства в Европейския съюз.



Този символ на продукта или на опаковката му означава, че този продукт не трябва да се изхвърля с останалите домакински отпадъци. Вместо това, ваше задължение е да изхвърляте вашето оборудване, като го предадете на специален пункт за събиране и рециклиране на електрическо и електронно оборудване. Разделното събиране и рециклиране на вашето оборудване по време на изхвърлянето ще спомогне за опазването на природните ресурси и ще гарантира, че е рециклирано, което предпазва околната среда и човешкото здраве. За повече информация за това къде можете да предадете вашето оборудване за рециклиране, трябва да се свържете с местния офис, местната фирма за събиране на отпадъци или към магазина откъдето сте закупили продукта.

WEEE Декларация за Индия (по избор)

Този символ върху продукта или опаковката му показва, че този продукт не трябва да се изхвърлят заедно с другите битови отпадъци. Вместо това, тя е Ваша отговорност е да изхвърлите отпадъчното оборудване чрез предаване на определено място за рециклиране на отпадъци от електрическо и електронно оборудване. Разделно събиране и рециклиране на отпадъчно оборудване в момента на унищожаването ще помогне за запазването на природните ресурси и да се гарантира, че то ще бъде рециклирано по начин, който предпазва човешкото здраве и околната среда.

За повече информация за това къде можете да оставите на отпадъчното оборудване за рециклиране в Индия, моля посетете по-долу интернет връзка. <u>www.aocindia.com</u> / ewaste.php.

EPA Energy Star(по избор)



ENERGY STAR® е регистрирана марка в САЩ. Ако партньор на ENERGY STAR®, AOC International (Europe) BV и Envision Peripherals, Inc. са определили, че този продукт отговаря на ENERGY STAR® директивите за енергийна ефективност. (За EPA сертифицирани модели)

ЕРЕАТ декларация(по избор)



ЕРЕАТ е система, която помага на потребителите в публичния и частния сектор да оценят, сравнят и изберат настолен компютър, ноутбук и монитор според техните атрибути свързани с околната среда. ЕРЕАТ осигурява също ясен и постоянен набор от критерии за представяне за дизайна на продуктите и осигурява възможност за производителите, да подсигурят разпознаваемостта на пазара, заради усилията да се намали влиянието на продуктите върху околната среда.

АОС вярва в опазването на околната среда.

С главната загриженост за опазване на природните ресурси, както и за защита на сметищата, АОС обявява пускането на програма за рециклиране на опаковките от монитори. Тази програма е предназначена, за да ви помогне да изхвърлите картона и пълнещите елементи от монитора правилно. Ако няма местен център за рециклиране, АОС ще рециклира опаковъчния материал, включително стиропор и картон. АОС Display решението ще рециклира опаковки само от монитори АОС.

Услуги

Гаранционни условия за Европа

Три годишна ограничена гаранция*

За АОС цветни монитори продавани в Европа, АОС International (Europe) В.V. гарантира, че продукта няма дефекти в материала и такива в следствие на некачествена работа за период от три (3) години след оригиналната дата на закупуване от потребителя. По време на този период, АОС International (Europe) В.V. ще, по своя възможност, или да поправи дефектните продукти с нови или възстановени части, или да го подмени с нов или възстановен продукт, без заплащане, освен в случаите изброени по-долу. При липса на доказателство за покупка, гаранцията ще започне 3 месеца след датата на производство, обозначена на продукта.

Ако продукта е дефектен, трябва да се свържете с местния доставчик или погледнете раздела за услуги и поддръжка на www.aoc-europe.com за инструкции относно гаранцията. Доставка на продукта трябва да е заплатена, заедно с доказателство за датата на покупката, до оторизиран сервизен център на АОС при следните обстоятелства:

- Уверете се, че LCD монитора е опакован в подходяща картонена кутия (AOC предпочита оригиналните кутии, за да може монитора да е достатъчно защитен по време на транспорта).
- Поставете RMA номера на етикета с адреса
- Поставете RMA номера на картона за доставка

AOC International (Europe) B.V. не носи отговорност нито за повреди или загуба по време на транспортни повреди, нито за продукти, който не са били правилно опаковани. AOC International (Europe) B.V. ще плати разходите по обратната доставка в рамките на държавите определени с гаранцията. AOC International (Europe) GmbH не носи отговорност за разходи свързани с пренасянето на продукта през международни граници. Това включва и границите в рамките на Европейския съюз. Ако LCD монитора не е достъпен за получаване при куриера, ще бъдете таксувани с такса за получаване.

Тази ограничена гаранция не покрива загуби или повреди, които са възникнали в следствие на

- Неправилно инсталиране или поддръжка
- Неправилна употреба
- Небрежност
- Всякакви случаи различни от нормалните потребителски или индустриални приложения
- Настройване на неоторизирани източници
- Поправка, модификация или инсталиране на възможности или части от всеки различен от оторизиран сервизен център на АОС.
- Неподходящи околни условия като висока влажност и прах
- Повреда нанесена с насилие
- Силно или неподходящо отопление или климатизация или прекъсвания на тока, токови удари или други неизправности.

Всички АОС LCD монитори са произведени според стандартите на ISO 9241-307 клас 1 за пиксели.

ВСИЧКИ ГАРАНЦИИ, ИЗРИЧНО ПОСОЧЕНИ ИЛИ ПОДРАЗБИРАЩИ СЕ, КОИТО СЕ ОТНАСЯТ ДО ТОЗИ ПРОДУКТ (ВКЛЮЧИТЕЛНО ГАРАНЦИИТЕ ЗА ПРОДАВАЕМОСТ И ПРИГОДНОСТ ЗА ОПРЕДЕЛЕНА ЦЕЛ) СА С ОГРАНИЧЕН СРОК ОТ ТРИ (3) ГОДИНИ ЗА ЧАСТИ И ТРУД И ЕДНА (1) ГОДИНА ЗА СRT ТРЪБАРА ИЛИ LCD ПАНЕЛА СЧИТАНО ОТ ДАТАТА НА ПОКУПКАТА ОТ КЛИЕНТА.

ОТГОВОРНОСТИТЕ НА ЕРІ, КАКТО И ВАШИТЕ ПРАВА СА ПОСОЧЕНИ В НАСТОЯЩИЯ ДОКУМЕНТ И ТРЯБВА ДА СЕ РАЗБИРАТ ТАКА, КАКТО СА ФОРМУЛИРАНИ. ЗАДЪЛЖЕНИЯТА НА ЕРІ, НЕЗАВИСИМО ДАЛИ ПРОИЗЛИЗАТ ОТ ДОГОВОР, ГАРАНЦИЯ, ЗАКОНОВА ОТГОВОРНОСТ ЗА ЩЕТИ И ПОВРЕДИ, НЕ ТРЯБВА ДА НАДВИШАВАТ ЦЕНАТА НА ИНДИВИДУАЛНОТО УСТРОЙСТВО, ЧИЙТО ДЕФЕКТ ИЛИ ЩЕТА Е ОСНОВАНИЕ ЗА РЕКЛАМАЦИЯТА. ПРИ НИКАКВИ ОБСТОЯТЕЛСТВА ENVISION PERIPHERALS, INC. НЕ МОЖЕ ДА БЪДЕ ОТГОВОРНА ЗА ФИНАНСОВИ ЗАГУБИ И ПЕЧАЛБИ, НЕВЪЗМОЖНОСТ ЗА ПОЛЗВАНЕ НА ОБОРУДВАНЕ ПОРАДИ ЩЕТИ, НАНЕСЕНИ ОТ НЕБРЕЖНОСТ ОТ ДРУГИ ЛИЦА, ИЛИ ДРУГИ ИНДИРЕКТНИ, ИНЦИДЕНТНИ ИЛИ ПОСЛЕДВАЛИ ЩЕТИ. ВЪПРЕКИ, ЧЕ НАСТОЯЩАТА ОГРАНИЧЕНА ГАРАНЦИЯ ВИ ДАВА ОПРЕДЕЛЕНИ ЗАКОНОВИ ПРАВА, ВИЕ МОЖЕ ДА РАЗПОЛАГАТЕ С ДРУГИ ПРАВА, КОИТО СА РАЗЛИЧНИ В РАЗЛИЧНИТЕ ДЪРЖАВИ. ТАЗИ ОГРАНИЧЕНА ГАРАНЦИЯ Е ВАЛИДНА САМО ЗА ПРОДУКТИ, ЗАКУПЕНИ В СТРАНИТЕ-ЧЛЕНКИ НА ЕВРОПЕЙСКИЯ СЪЮЗ.

Информацията в този документ подлежи на промени без предизвести.

За подробности, моля посетете:

www.aoc-europe.com